


Choosing and Configuring Printers

Selecting a Bluetooth Printer


To begin navigate to the System Settings:

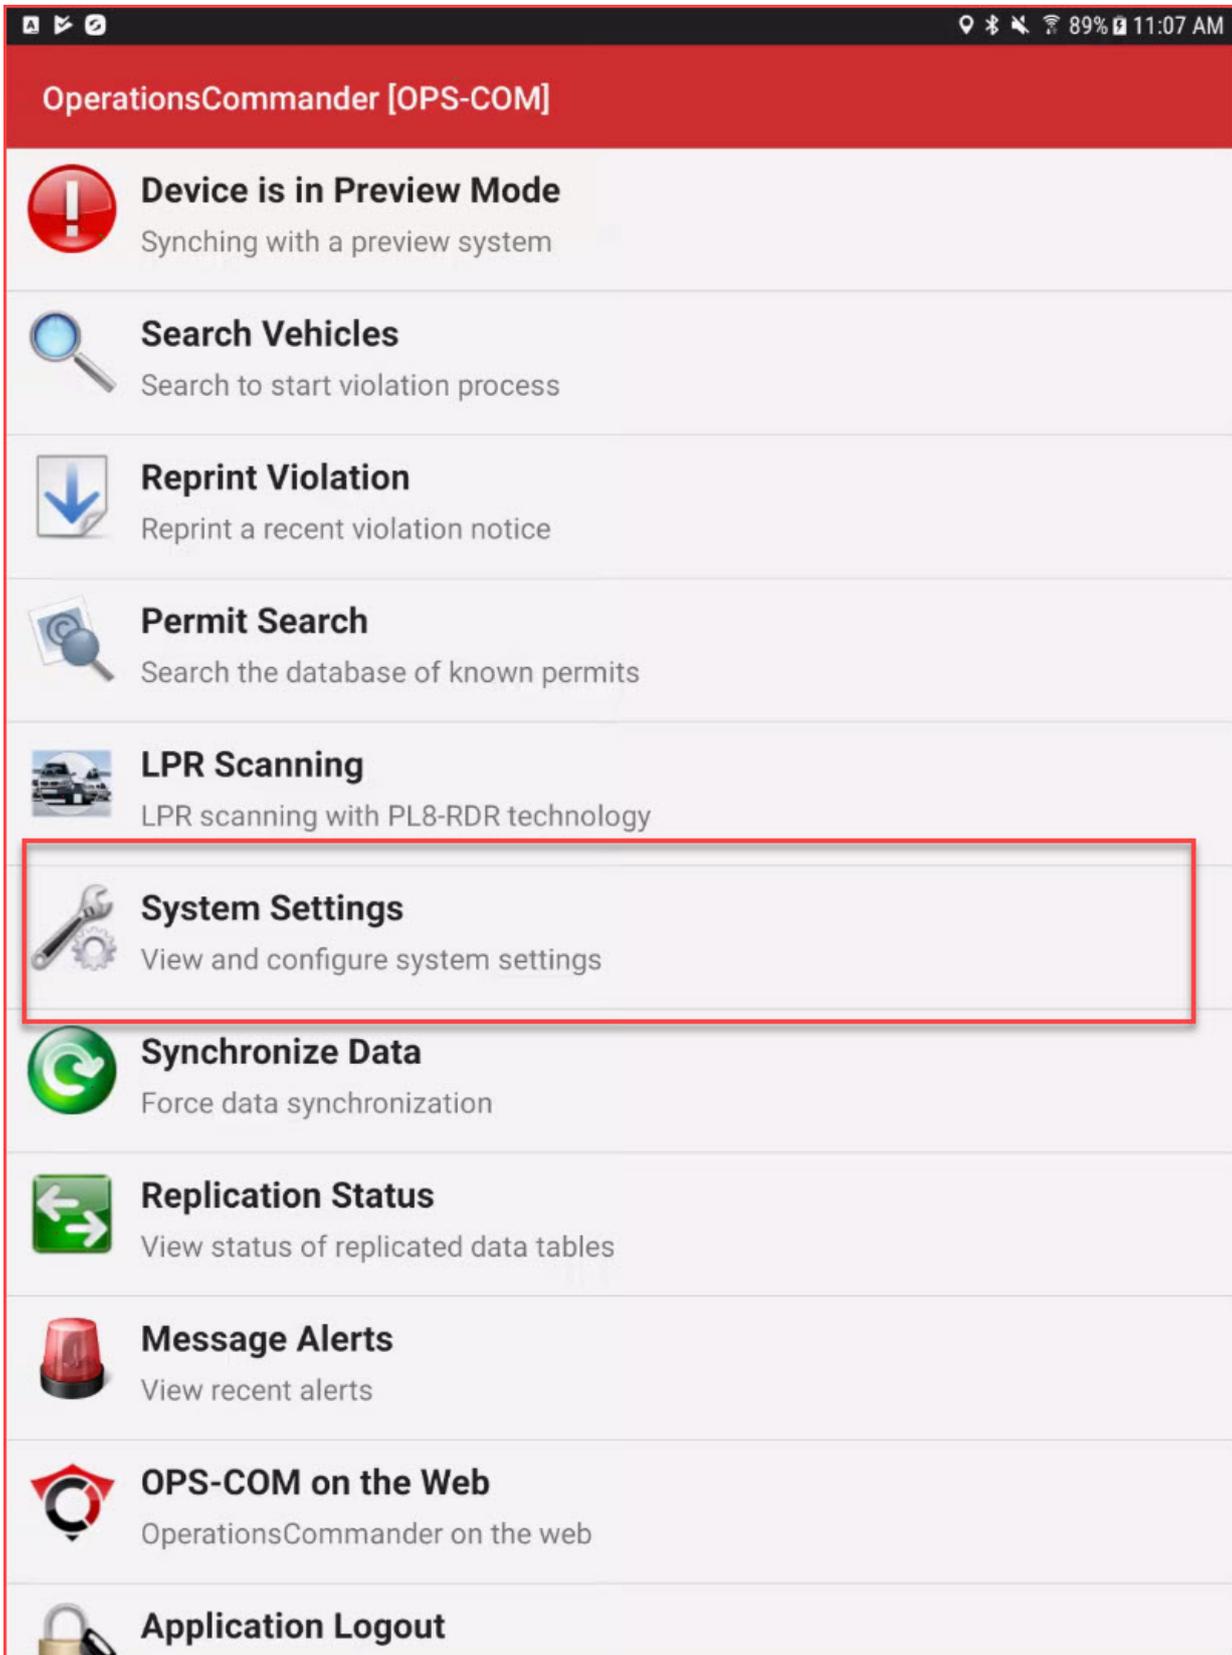

Access System Settings

Once in System Settings look for the following two items:

- Bluetooth print driver
- Bluetooth Printer

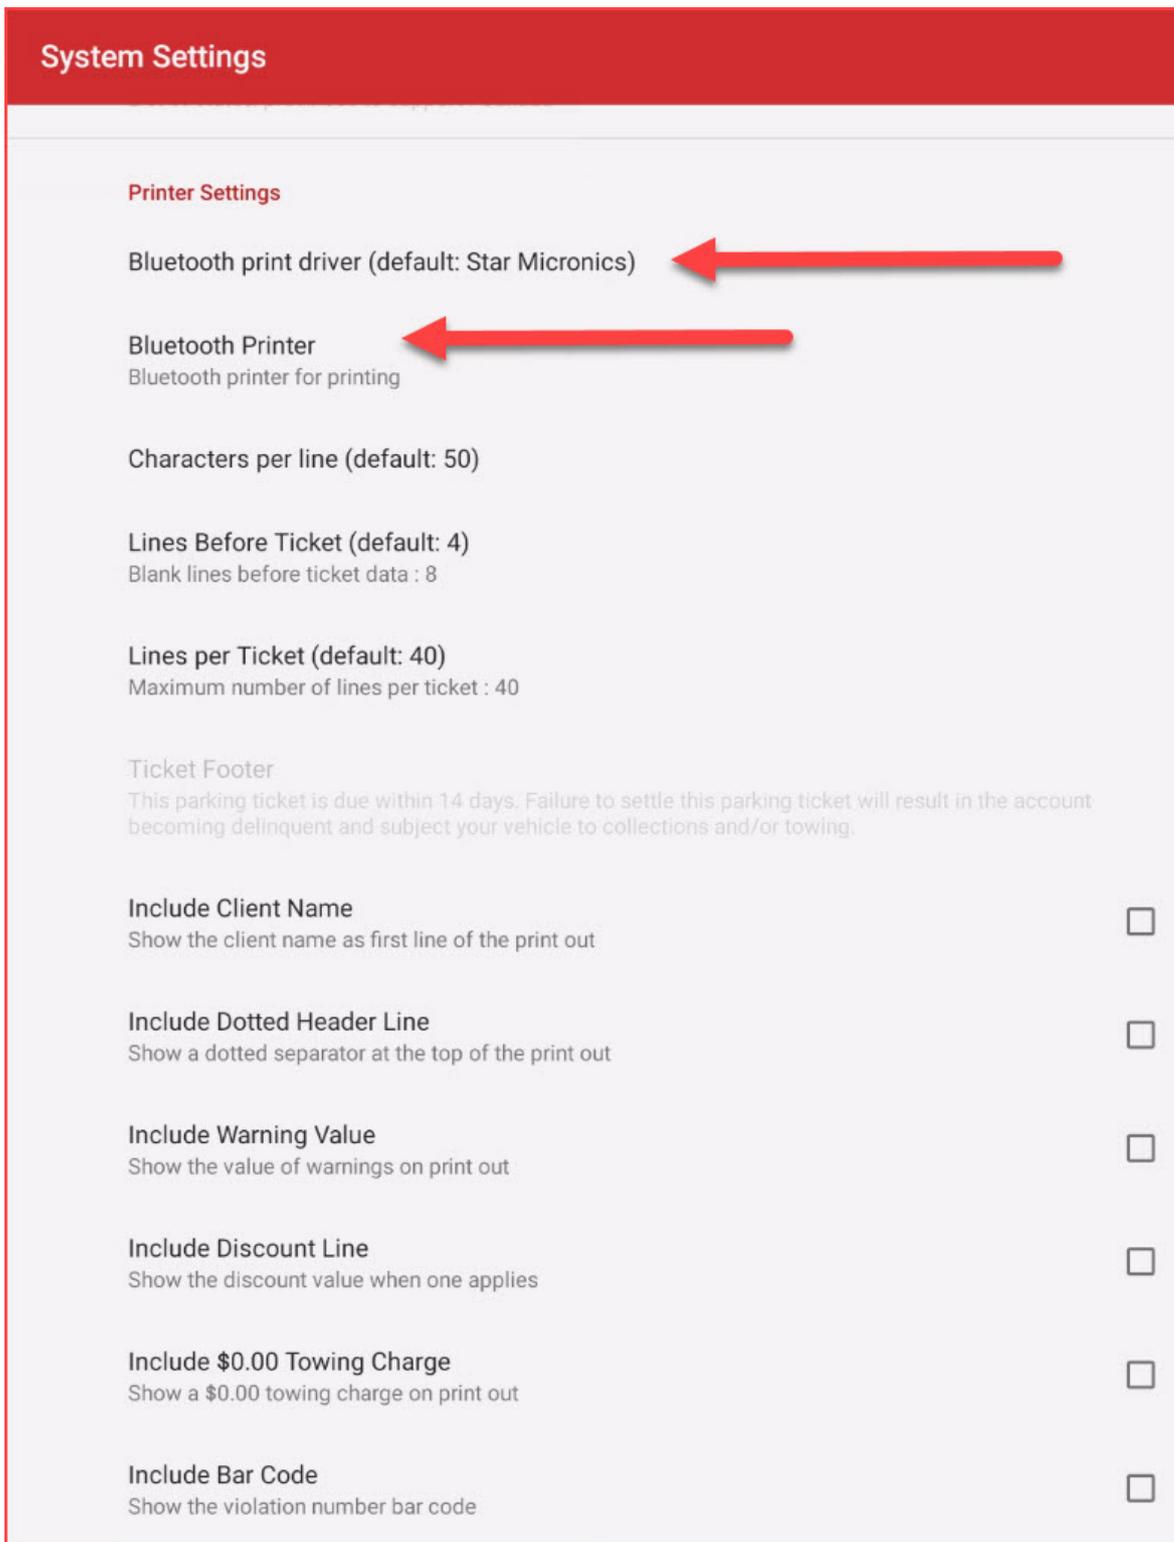


Select the Printer


Tap on Bluetooth print driver to select the proper driver for the printer you are using.

By default the printer is set to Star Micronics. If you are using a Zebra printer, tap to select Zebra.

Selecting the driver will close the pop up and return to the main settings menu.

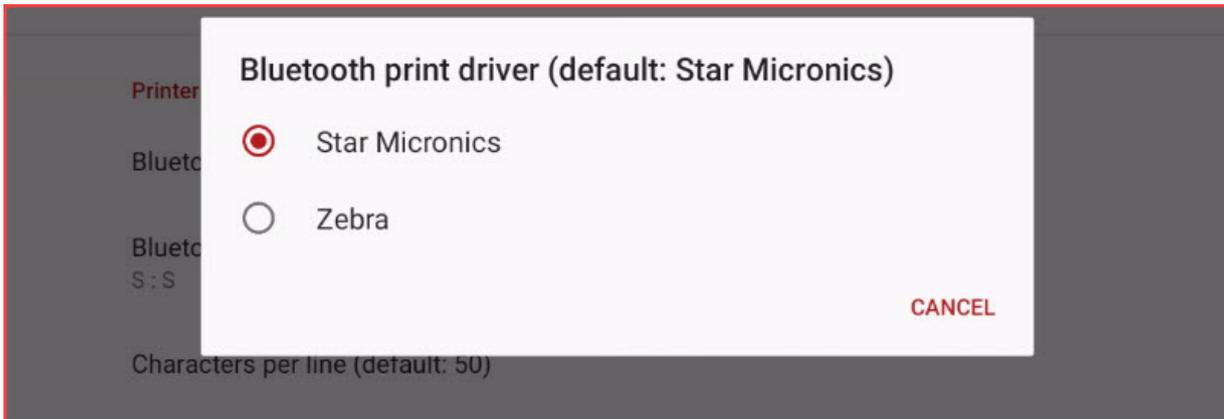

Click on Bluetooth Printer to select the printer you are using.

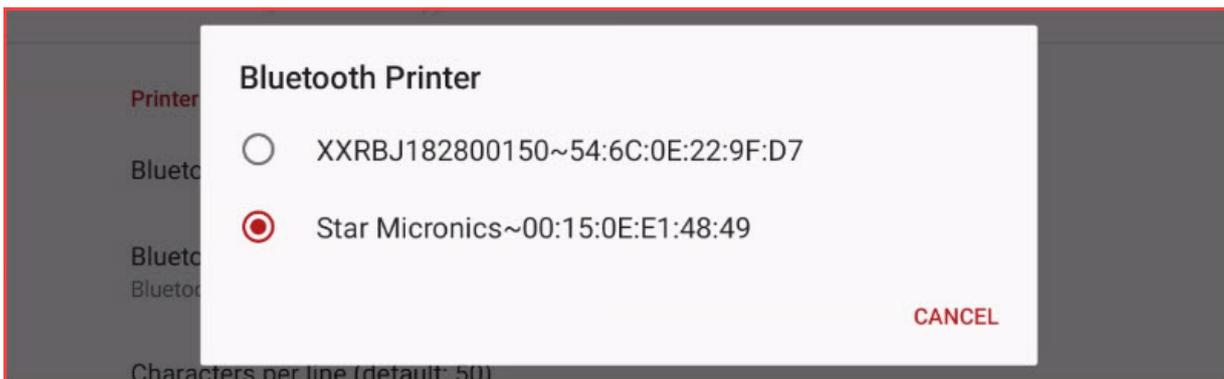

It is important that these two settings match as far as printer type.

If they do not match the printer will either not work or it will start to print odd code and characters.

Testing the Printer

It is always a good idea to issue a test violation to ensure that the printer is working as expected.

Revision #2

Created 30 April 2024 07:15:24

Updated 11 September 2024 13:40:49