


PL8RDR Hardware Connections

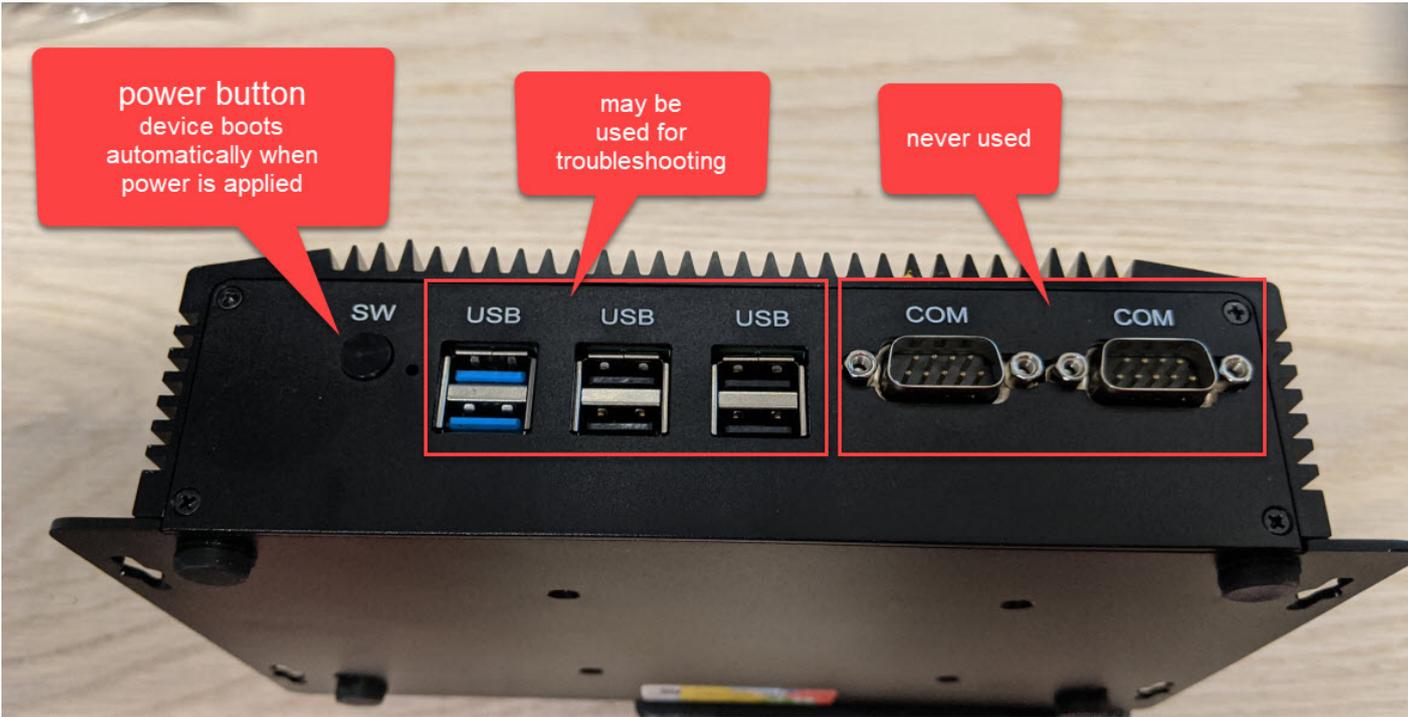




SIM card slot

In the field, only the cellular antenna, wifi antenna, and power connectors are used.

Power is 12V DC and should be connected with an inline fuse.

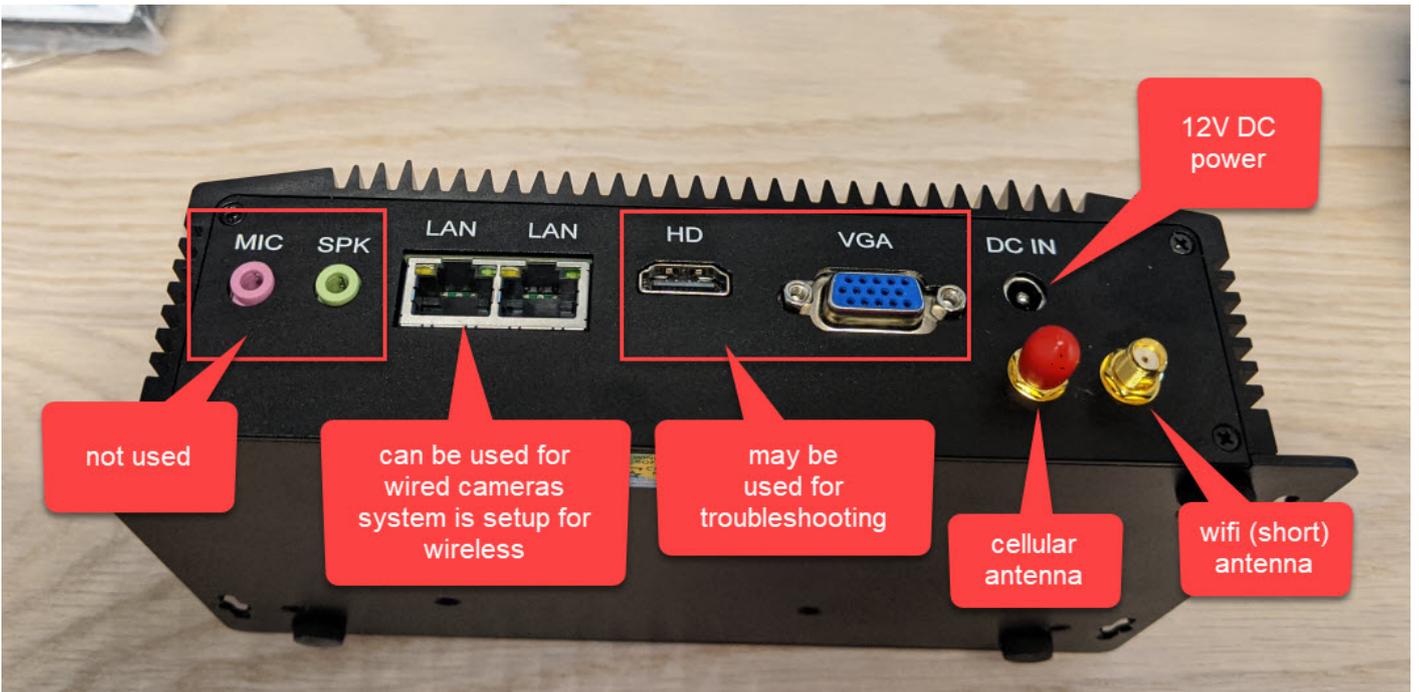

not used


can be used for wired cameras system is setup for wireless

may be used for troubleshooting

cellular antenna

wifi (short) antenna

12V DC power

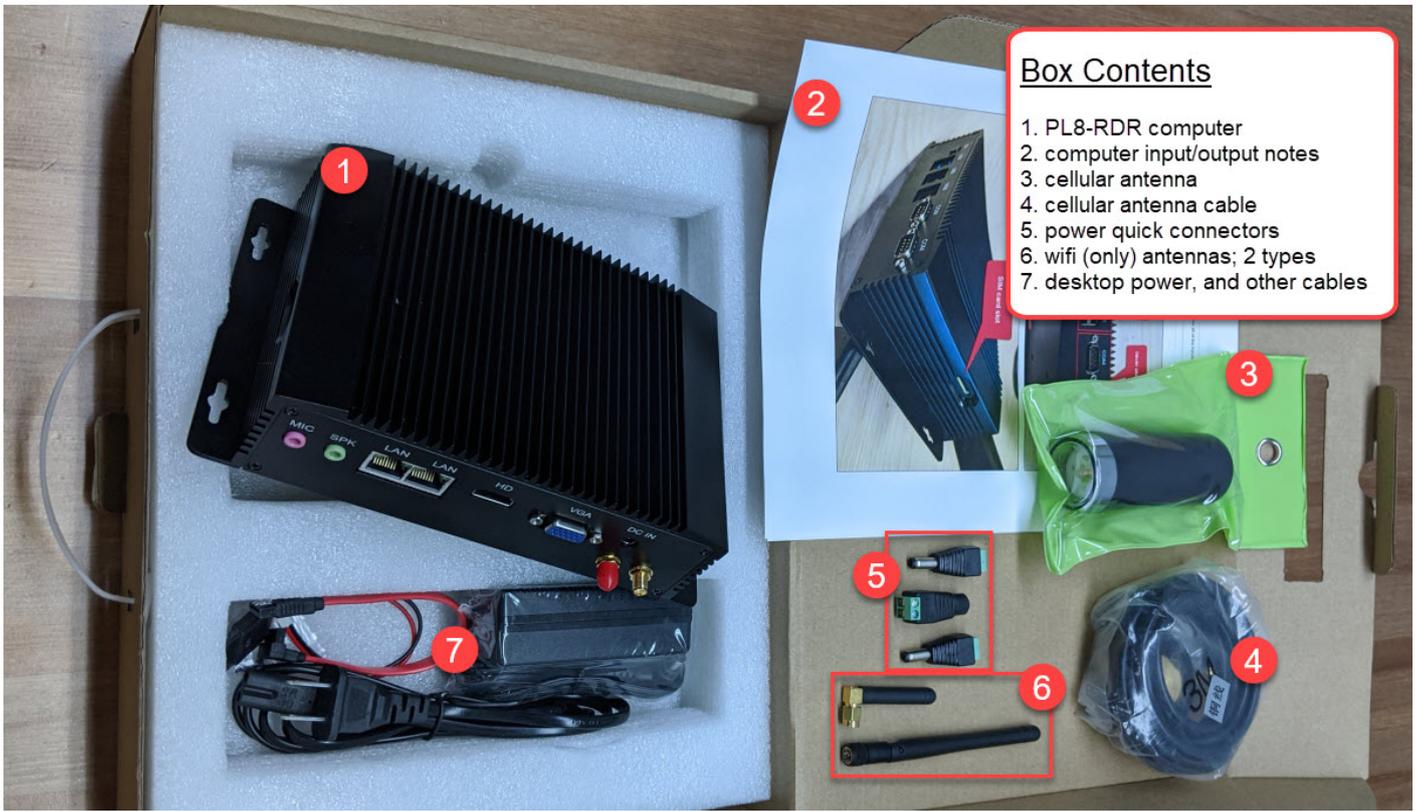

Box Contents

1. PL8-RDR computer
2. computer input/output notes
3. cellular antenna
4. cellular antenna cable
5. power quick connectors
6. wifi (only) antennas; 2 types
7. desktop power, and other cables

Revision #2

Created 24 May 2024 14:12:28

Updated 11 September 2024 13:40:49