LPR Camera Adjustment Tutorial - Survision

1. LPR Camera Adjustment

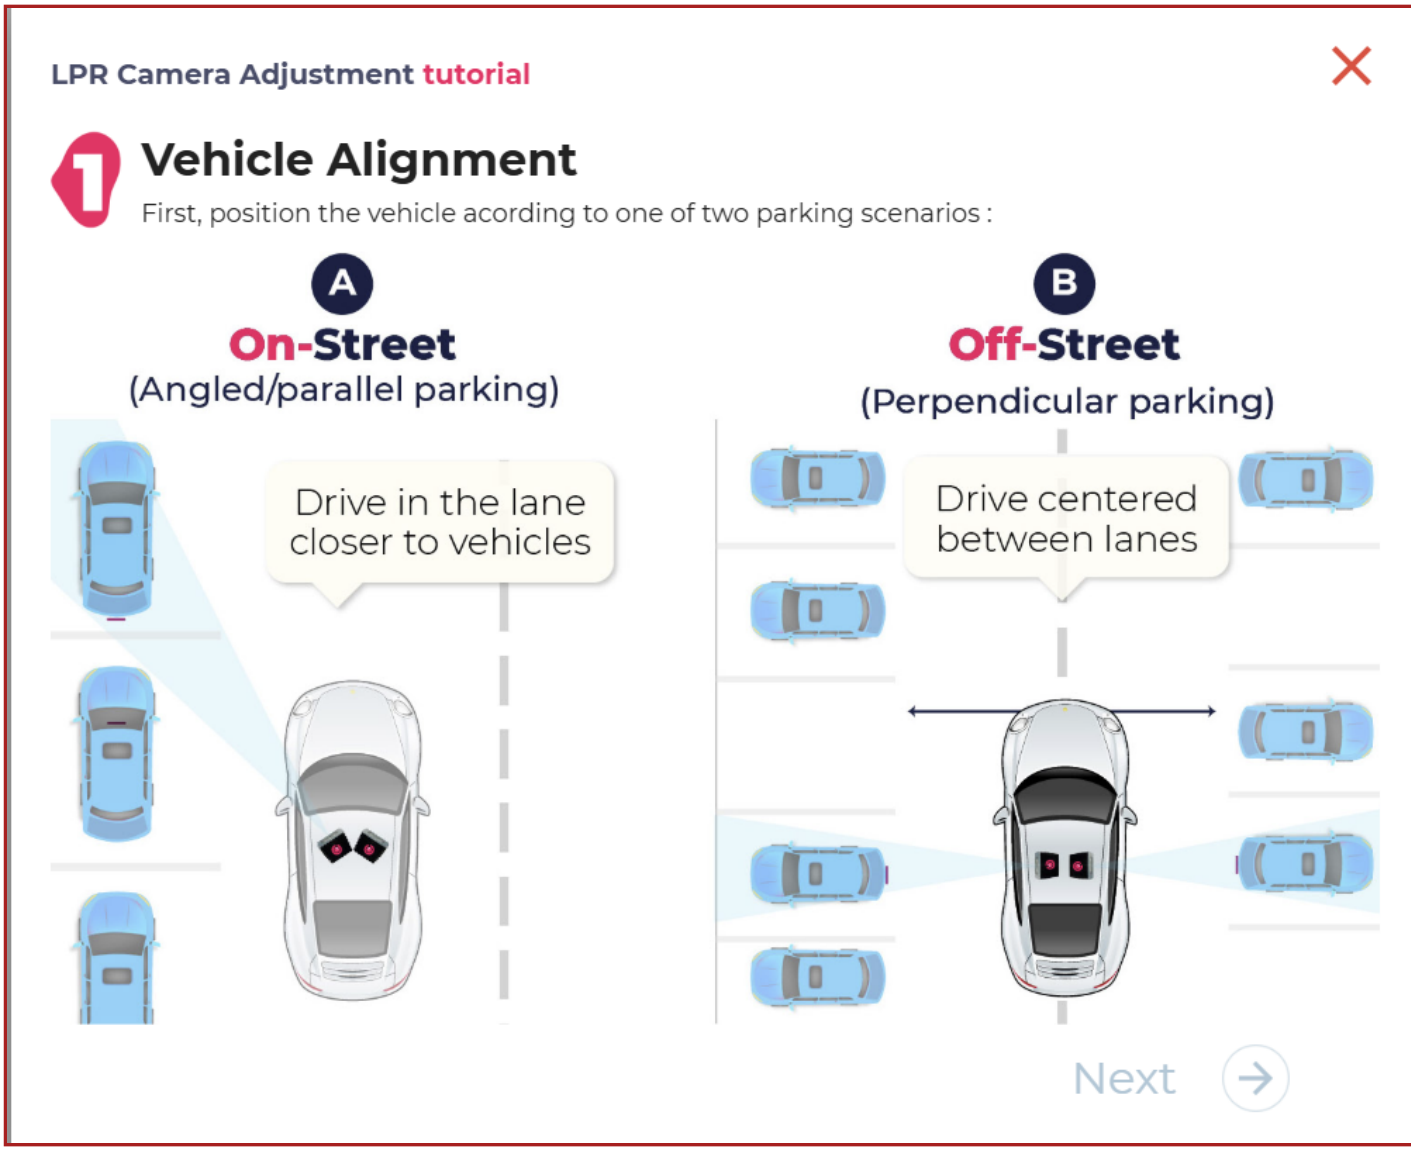

2. Camera Aiming

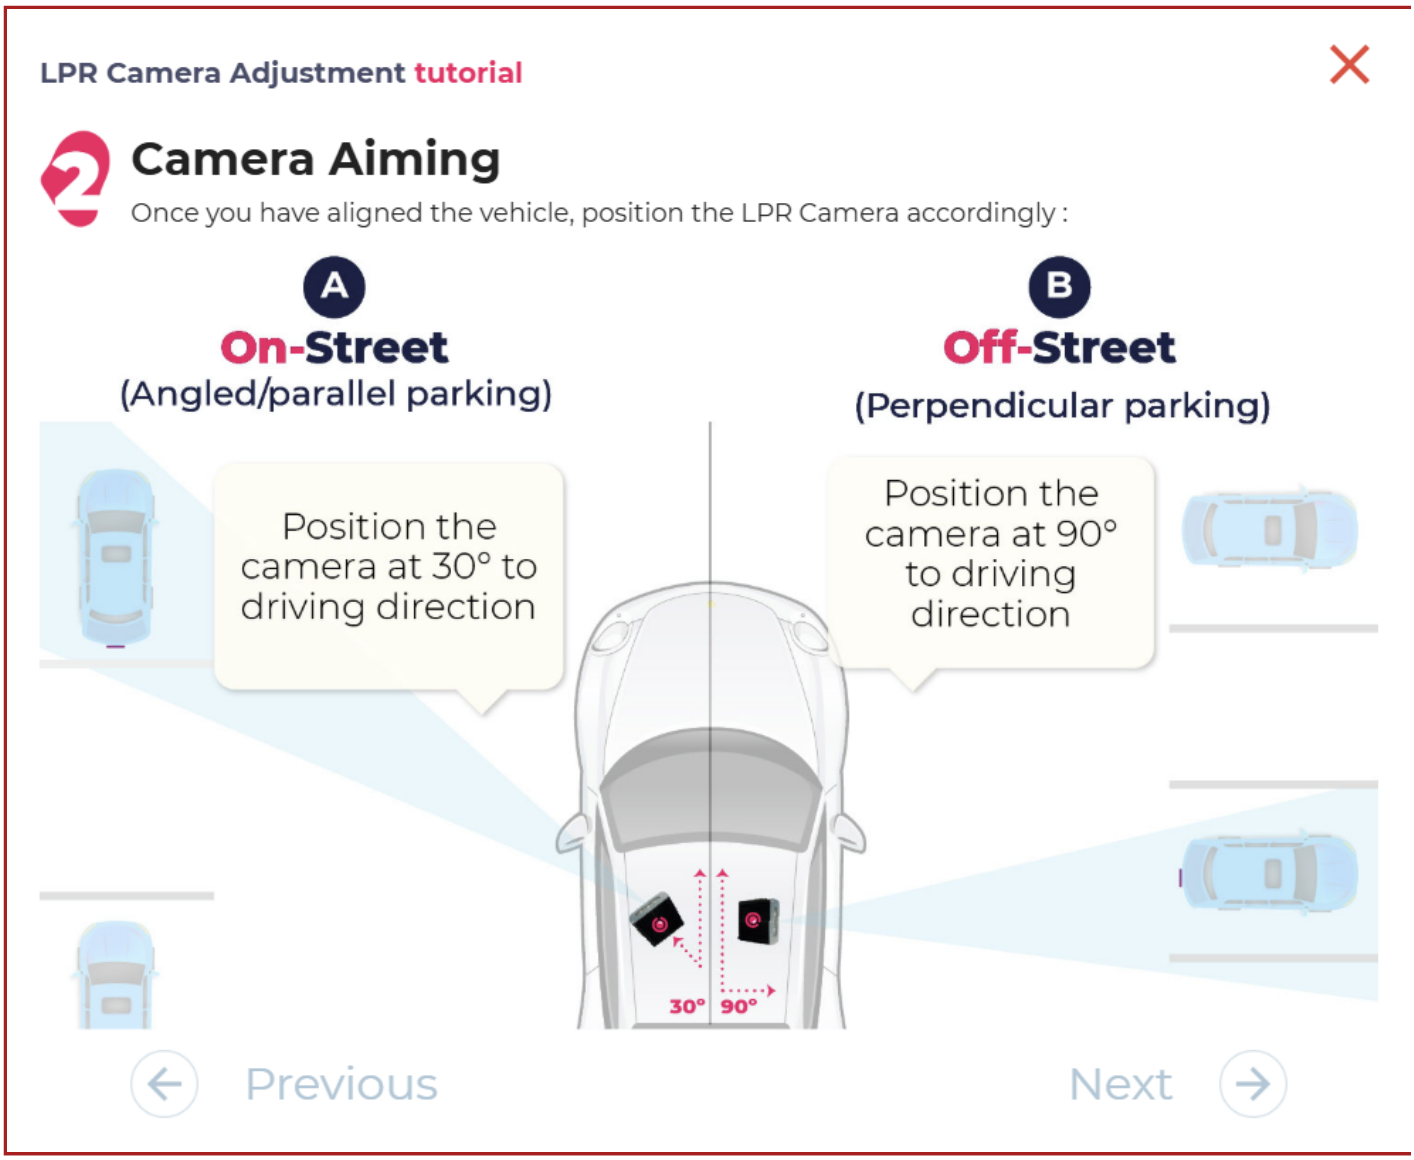
LPR Camera Adjustment tutorial
Camera Aiming
Once you have aligned the vehicle, position the LPR Camera accordingly :
A
On-Street
(Angled/parallel parking)
Position the camera at 30° to driving direction
B
Off-Street
(Perpendicular parking)
Position the camera at 90° to driving direction
30°
90°
Previous
Next

3. Framing

LPR Camera Adjustment tutorial

3 Framing

Once you have aligned the vehicle and the camera, go to your PlatEnforce App and using the live view, make sure :

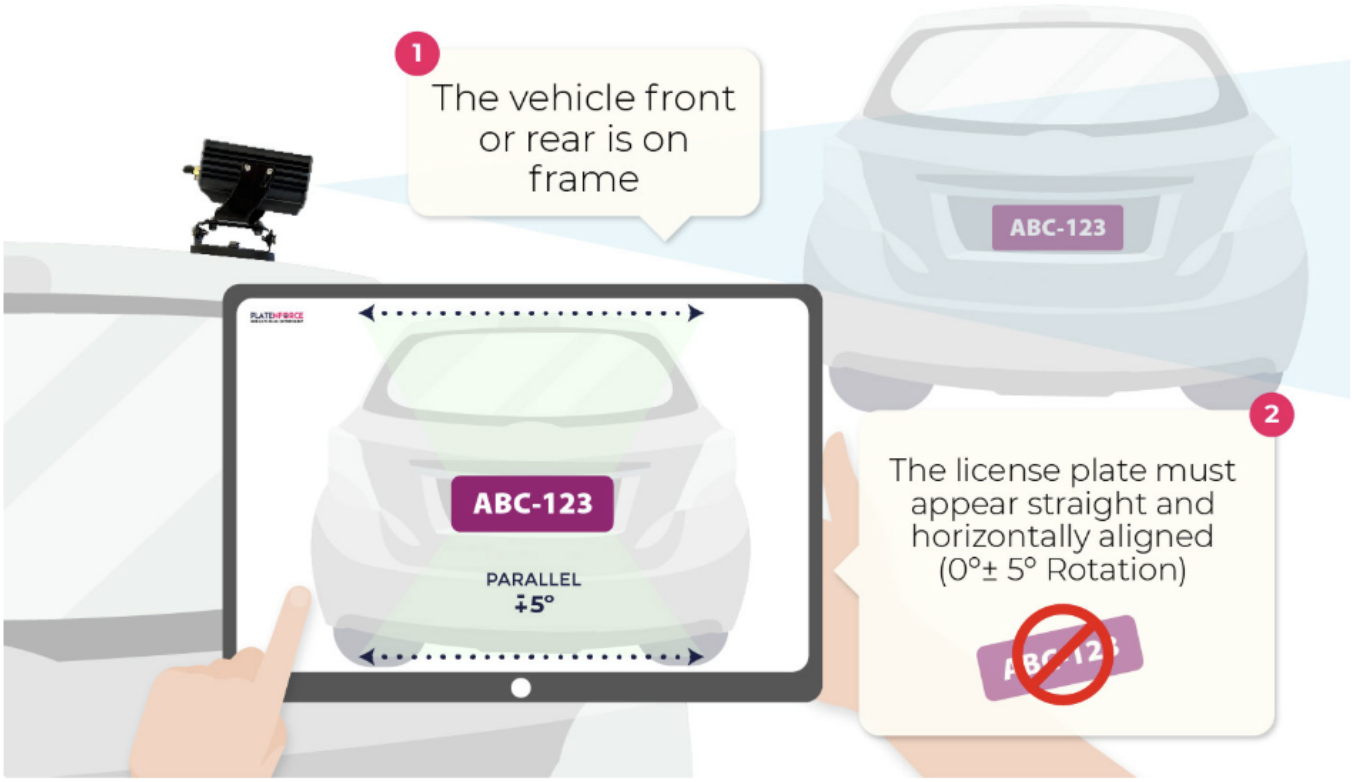

Previous Continue

Take Command of Your Parking and Security - https://OperationsCommander.com

Revision #2
Created 21 September 2026 13:10:18
Updated 21 September 2026 13:18:18